




# Canon PowerShot A200 Camera Lens Replacement

Replace the broken or malfunctioning lens.

Written By: William Starr

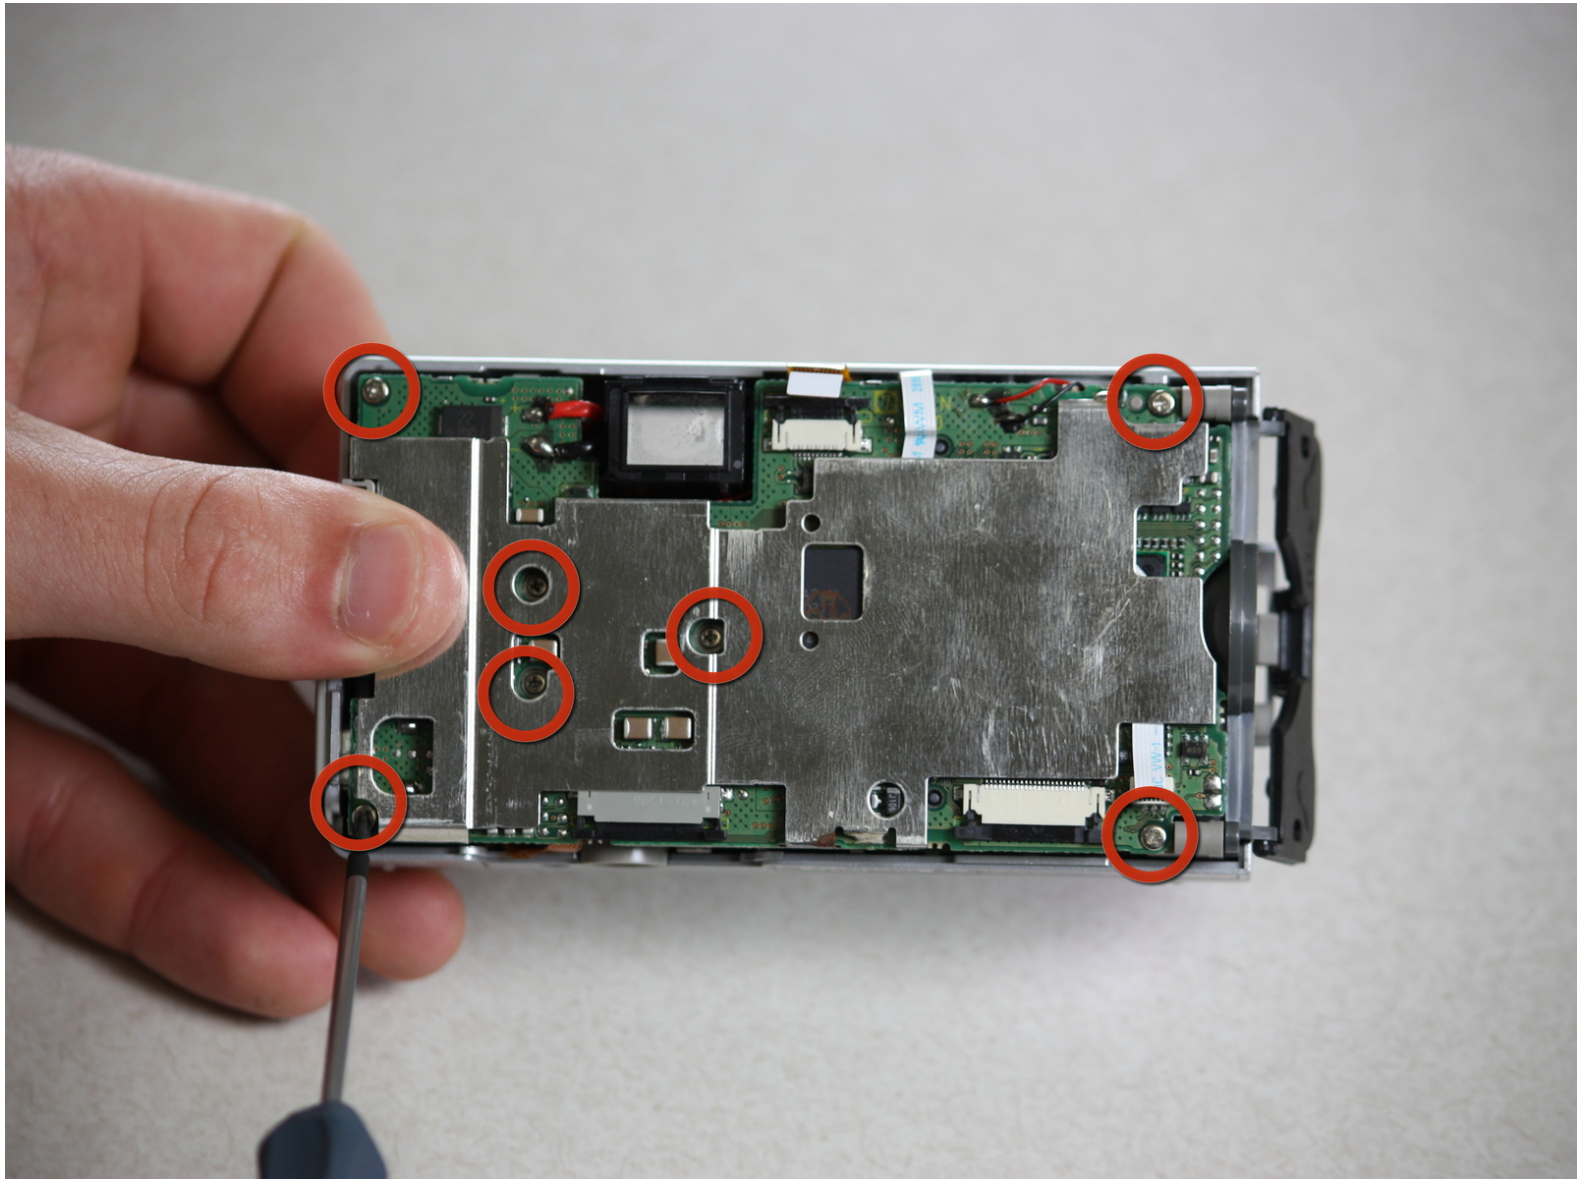

## INTRODUCTION

The camera lens is located on the front side of the overall case. This guide will show you how to repair the broken or malfunctioned lens.

---



### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Case



- Use the Phillips head screwdriver, rotating counterclockwise, to remove the two screws at the bottom of the camera. Set screws aside.

## Step 2



- Hold the camera right side up with the LCD screen facing you. There is a rubber cover on the left side of the camera. Move the cover out of the way to expose another screw.
- Use a Phillips head screwdriver, rotating counterclockwise, to remove both screws. Set the screws aside.




### Step 3



- Hold the camera right side up with the LCD screen facing you. Open the battery on the right side of the camera casing by pushing slightly in the direction of the arrow.
- Note: You may see a memory card. If so, remove the card by pushing down on it and it will come loose so you can gently pull it out.
- Use the Phillips head screwdriver, rotating counterclockwise, to remove the two screws on either side of the memory card. Set the screws aside.

## Step 4

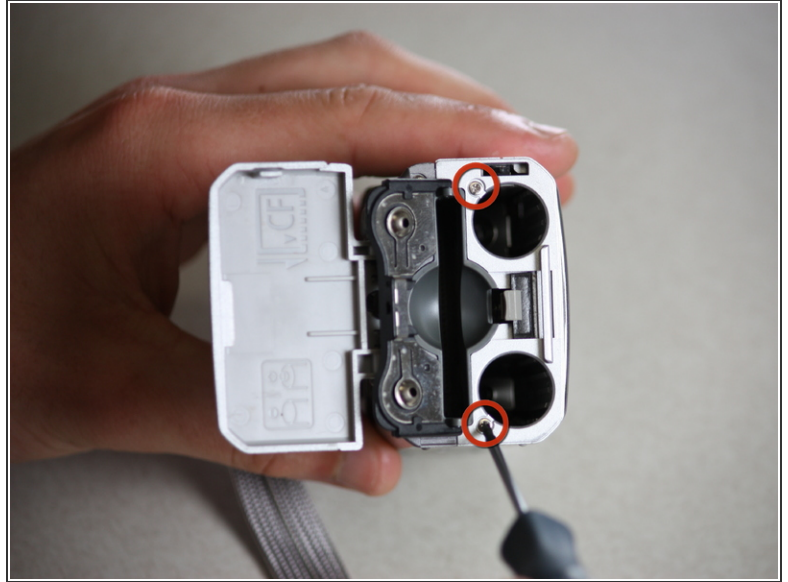

- While pulling the grey tab towards the back of the camera, lift the black section of the battery cover up.
- Use the Phillips head screwdriver, rotating counter clockwise to remove the two screws on either side of the battery slots and set them aside.
- When reassembling the camera, make sure that the grey part of the battery cover is underneath the two halves of the camera casing. The black cover should fit over the empty space where the batteries go and the holes for the screws should line up with the holes in the casing. You may need to pull the green part of the inside of the camera away from the grey tab in order to move the battery cover into place.



## Step 5



- Hold the camera right side up with the LCD screen facing you. Remove the screen battery located to the left of the screen. Set it aside.



## Step 6



⚠ Be cautious when completing this step, as the camera will only be held together by two short ribbons.

- Gently pull the camera apart, and be aware that the ribbons are at the bottom of the camera.


## Step 7

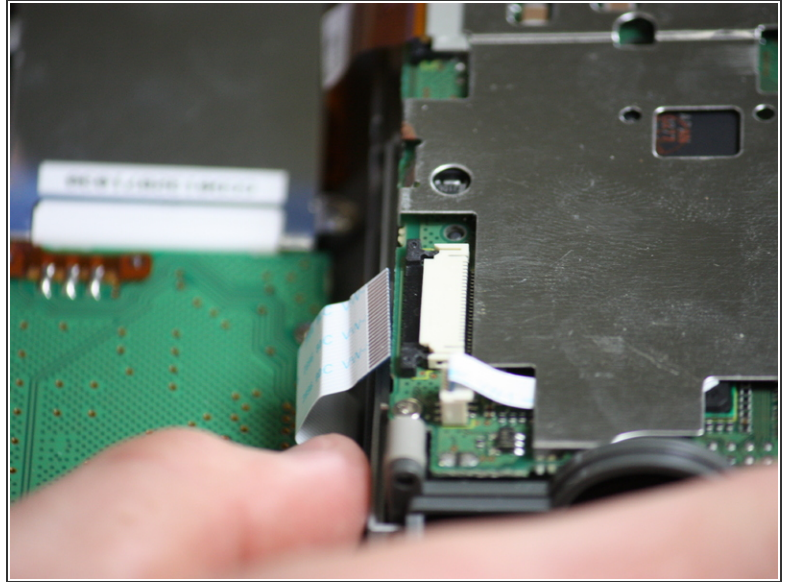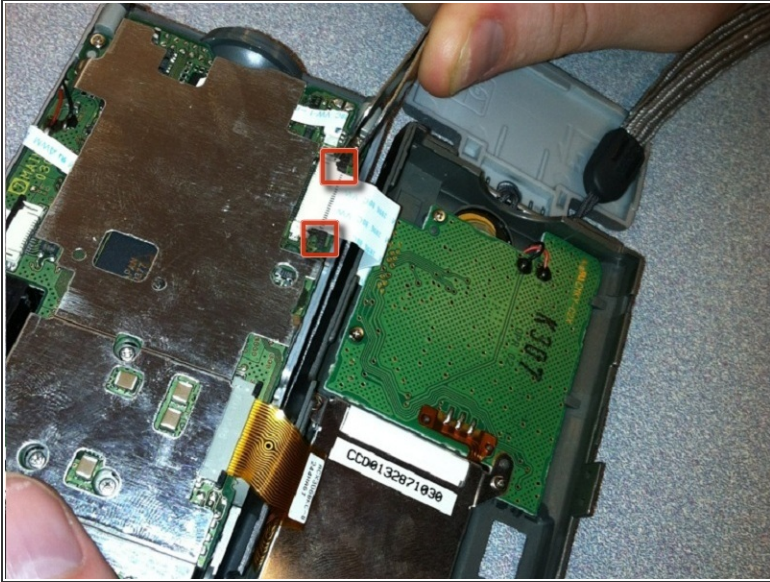

- On the front half of the camera, locate the black tabs on either side of the white ribbon.
- Use the metal tweezers to gently move the black tabs away from the eye viewing lens.
- Gently pull the white ribbon out of the connection.




## Step 8

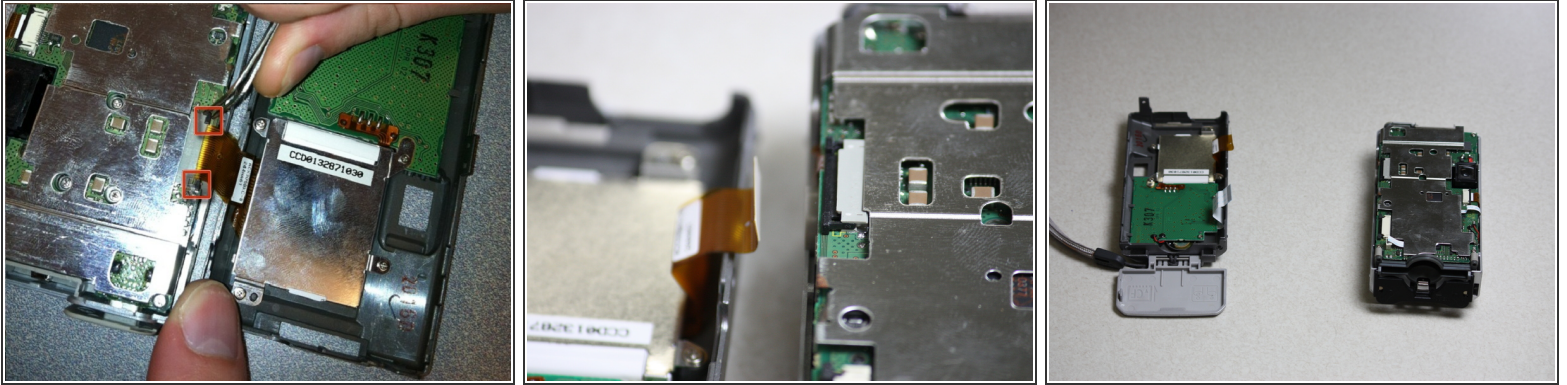

- On the front half of the camera, locate the black tabs on either side of the orange ribbon.
- Use the metal tweezers to gently move the black tabs away from the eye viewing lens.
- Gently pull the orange ribbon out of the connection.
- Note: Your camera should now be in two separate pieces. You can set aside the half with the LCD screen.


## Step 9 — Camera Lens

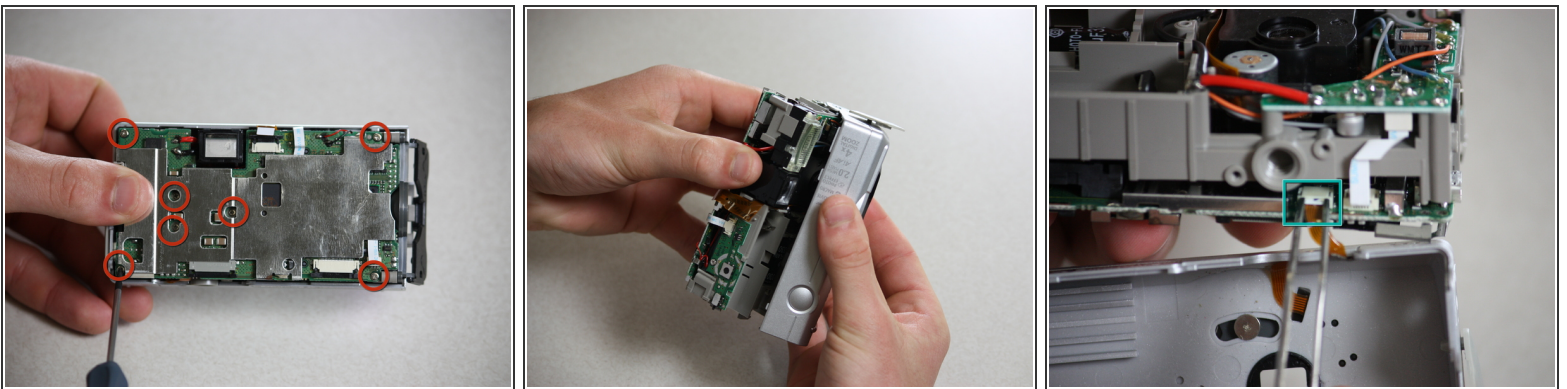

- Unscrew all the highlighted screws.
- Pull out the inside of the camera from the the outside casing.
- Using metal tweezers, unplug the connector.






## Step 10

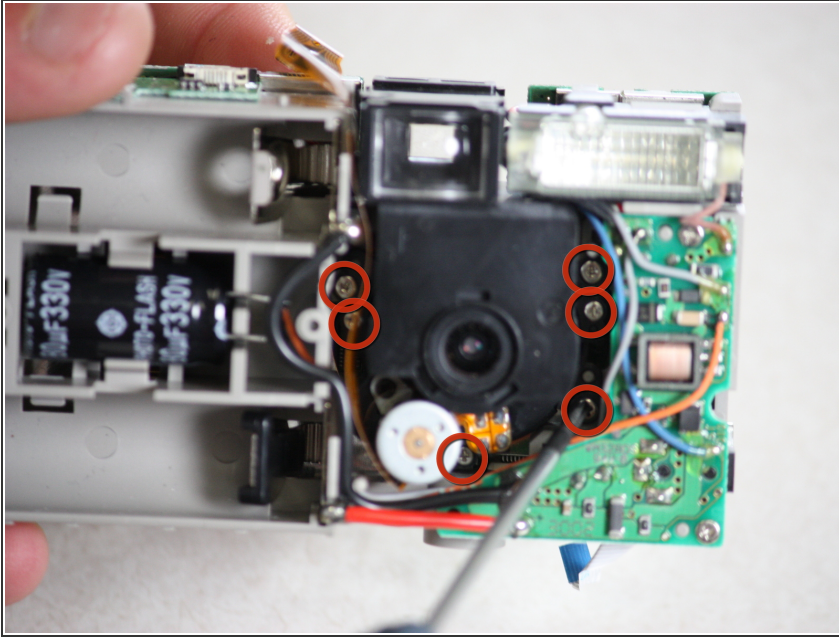

- Remove all the highlighted screws that are located around the lens.

## Step 11

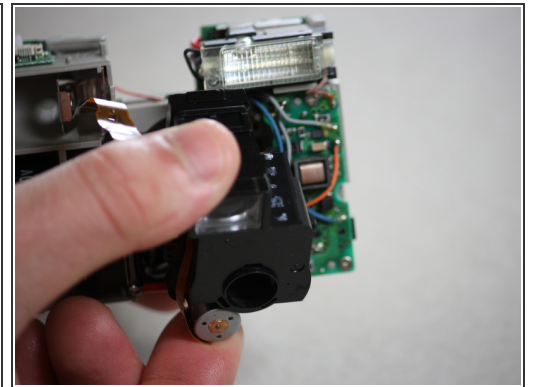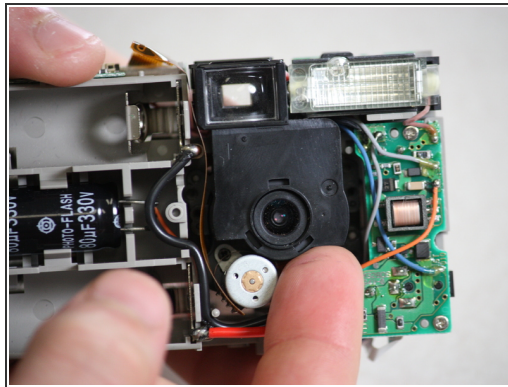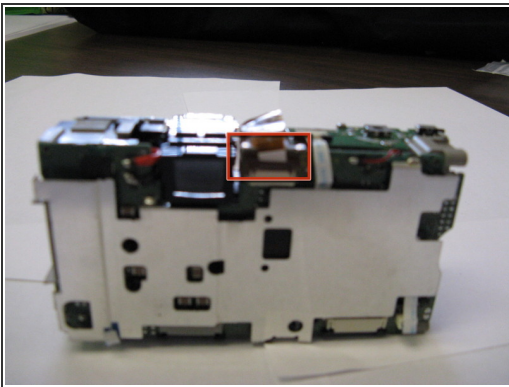

- Detach the last remaining orange strip from the camera as you did in the previous steps.
- The lens may now be removed from the camera, and replaced with a new one.

⚠ Note: When removing the lens, be aware that small pieces may fall out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-29 05:34:11 AM.